

handbook index:

<u>Item:</u>	<u>Page:</u>
Disassembling + Assembling	
How to dissassemble and assemble the controller box	1 - 2
How to change the motor	3 – 5
How to dissassemble and assemble the front top cover, front cover and changing the front light bulb	6 – 7
How to change the horn	8
How to change the side stand switch	9
How to change the speedometer	10
How to change the transform switch	11
How to change the counter	12
How to change the batteries	13 – 15
How to change the taillight	16 – 17
How to change the main switch assembly	18 - 19
How to change the left and right handle switch	20
How to change the throttle handle	21
How to change the main relays	22 – 23
How to change the left and right front winker and the front position light	24 – 25
Trouble Shooting	
1 . The power light doesn't illuminate and the scooter doesn't run	26
2 . The power light is on and the scooter doesn't run	27
3 . The motor runs slowly	28
4. The motor runs unevenly	29
5. The main switch is on and the motor runs quickly, out of control	29
6. The range is too short	29
7. The batteries don't charge or don't charge completely	30
8. The power light is not on but the scooter runs	30



9. The battery level display is incorrect but the scooter runs normally	30
10. The horn doesn't work	31
11. The light doesn't work	32
12. The motor makes a loud noise	33
13. The power supply to the motor is greater than normal; e.g. too high voltage	33
14. The scooter doesn't run because the control unit is defective	33
15. The drive mileage is only half of the normal	34
16. The speedometer doesn't work	34
Checking the Electronic and Electric components	ents
1. Control unit 1.1 Checking the phase cable	35
1.2 Checking Power IC diodes	36
1.3 Checking the signal	36
2. Checking the brake contact	37
3. Checking the power button	37
4. Checking the battery level display	37
5. Ignition switch cable	38
6. Throttle handle	38
7. Side stands	39
8. Relays 8.1 Relays placed in parallel	39
8.2 Single relays	40
9. Control box 9.1 Measuring voltage	40 41
9.2 Relays in control box	41